

BX-500

REED

INSTRUMENTS

Infrared Temperature Calibrator



**Instruction
Manual**



Table of Contents

Introduction	3
Product Quality.....	3
Safety	3-4
Features.....	4
Included.....	4
Specifications	5
Environmental Conditions	6
Instrument Description	7-8
Status Indicator Description.....	8
Keypad Description.....	9
Operating Instructions.....	9-13
<i>Initial Start Up</i>	9
<i>Turning Off the Calibrator</i>	10
<i>Selecting Temperature Unit of Measure</i>	10
<i>Setting the Temperature Set-Point</i>	10
<i>Setting Overload Alarms 1 & 3</i>	10-11
<i>Enabling/Disabling the Heating Power</i>	11
<i>Keypad Lock</i>	11-12
<i>Keypad Unlock</i>	12
Replacing the Fuses.....	13
Product Care	13
Accessories and Replacement Parts	14
Applications.....	14
Product Warranty	15
Product Disposal and Recycling	15
Product Support	15

Introduction

Thank you for purchasing your REED BX-500 Infrared Temperature Calibrator. This calibrator provides accurate temperatures to calibrate non-contact temperature instruments. The BX-500 is capable of generating temperatures up to 932°F (500°C) and is designed to accommodate various infrared thermometers. Please read the following instructions carefully before using your instrument. By following the steps outlined in this manual your meter will provide years of reliable service.

Product Quality

This product has been manufactured in an ISO 9001 facility and has been calibrated during the manufacturing process to meet stated product specifications. If a certificate of calibration is required please contact the nearest authorized REED distributor or authorized Service Center. Please note an additional fee for this service will apply.

Safety

This instrument can generate extreme temperatures. Precautions must be taken to prevent personal injury or damage to objects. To avoid personal injury read and follow these guidelines.

- Never attempt to repair or modify your instrument.
- Dismantling your instrument other than for the purpose of replacing fuses may cause damage that will not be covered under the manufacturer's warranty. Servicing should only be provided by an authorized Service Center.
- Do not touch the Infrared target surface of the instrument.
- The top casing of the instrument may exhibit high temperatures for areas close to the Infrared target surface.
- Do not turn off the instrument at high temperatures. Select a set-point less than 212°F (100°C) and allow the unit to cool before turning it off.
- Do not operate this unit without a properly grounded, properly polarized power cord.

continued...

- High voltage is used in the operation of this equipment. Severe injury or death may result if one fails to observe safety precautions.
- Always replace the fuse with one of the same rating, voltage, and type.
- Overhead clearance is required. Do not place this instrument under a cabinet or other structure.
- Do not operate near flammable materials.
- Use of this instrument at high temperatures for extended periods of time requires caution.
- Components and heater lifetime can be shortened by continuous high temperature operation.
- Do not use fluids to clean the target surface.

Features

- For calibrating non-contact temperature instruments (infrared thermometers, pyrometers and thermal imagers)
- Wide aperture compensates for optical infrared thermometer variations
- Contact RTD reference well located directly behind the blackbody target to assure accurate results

Included

- Infrared Temperature Calibrator
- Power Cord


Specifications

Temperature Range:	122 to 932°F (50 to 500°C)
Accuracy:	≤212°F (100°C): ±1.6°F (0.8°C) 212 to 392°F (100 to 200°C): ±3.2°F (1.6°C) 392 to 932°F (200 to 500°C): ±5.6°F (2.8°C)
Stability:	≤212°F (100°C): ±0.2°F (0.1°C) 212 to 392°F (100 to 200°C): ±0.4°F (0.2°C) 392 to 932°F (200 to 500°C): ±0.8°F (0.4°C)
Resolution:	0.1°F (0.1°C)
Target Emissivity:	0.95 (Fixed)
Heating Time:	Approximately 30 mins to maximum
Cooling Time:	Approximately 30 mins to 122°F (100°C)
Aperture Diameter:	2.28" (58mm)
Display:	Dual LED
Power Supply:	110VAC, 2.5A
Product Certifications:	CE
Operating Temperature:	41 to 95°F (5 to 35°C)
Storage Temperature:	-4 to 140°F (-20 to 60°C)
Operating Humidity:	15 to 80%
Dimensions:	7.1 x 4.5 x 8.8" (180 x 114 x 233mm)
Weight:	6.6lbs (3kg)


Environmental Conditions

This instrument should not be operated in an excessively dusty or dirty environment and operates safely under the following conditions:

- Temperature range: 41 to 95°F (5 to 35°C)
- Ambient relative humidity: 15 to 80%
- Pressure: 75 to 106kPa
- Mains voltage within $\pm 10\%$ of nominal
- Temperature difference between the target surface and the RTD PT100 reference well located directly behind the target surface are calculated as shown in the graph below.

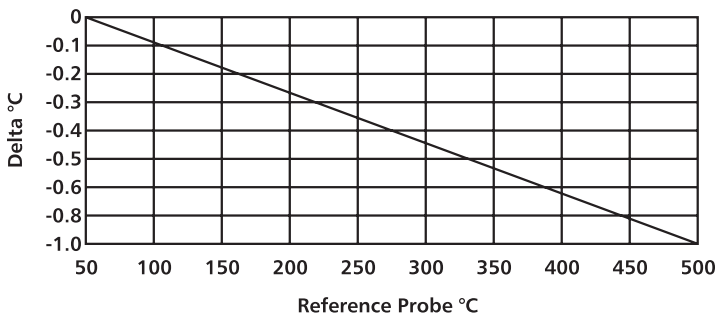

Instrument Description

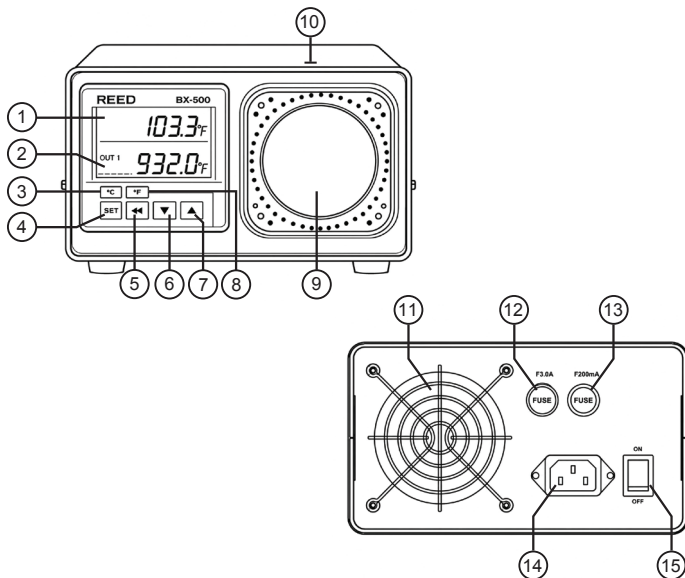

1. Upper Display
2. Lower Display
3. °C Button
4. SET Button
5. Digit Shift Button
6. Down Arrow Button
7. Up Arrow Button
8. °F Button

9. Infrared Target Surface
10. RTD Reference Well
11. Fan
12. Heating System Fuse
13. Control System Fuse
14. Power Socket
15. Power Switch

continued...

Note: The fan inside the calibrator has two speeds and runs continuously when the unit is in operation. The fan runs slow for heating and maintaining operation and runs fast for rapid cooling. The area around the calibrator must be kept clear to allow adequate ventilation. The airflow is directed out the front and can be extremely hot.





Status Indicator Description

Note: Using any other parameter other than the ones described in this manual will affect performance and could damage the calibrator.

AT	Auto-Tuning Parameter Adjustment (For Authorized Service Centers Only).
OUT	Heating Output Power Indicator.
ALM1	Overload Alarm indicates that the IR Calibrator temperature exceeds the set temperature. To set the alarm, refer to <i>Setting Overload Alarms 1 & 3</i> for details. Note: When triggered the heating output power is turned off.
ALM3	Overload Alarm indicates that the IR Calibrator temperature exceeds the set temperature. To set the alarm, refer to <i>Setting Overload Alarms 1 & 3</i> for details. Note: When triggered, the rapid cooling process will begin.
°F/°C	Temperature unit of measure.

Keypad Description

The four button keypad allows for easy set-point temperature. The temperature set-point can be set to a resolution of 0.1°F or °C.

	The SET button is used to confirm the selected value within the parameter and to exit the set up mode and resume normal operation. Note: At any time, you can press the SET button to exit the Setup mode and resume normal operation.
	The enter button is used to scroll through parameters.
	The up arrow is used to increase temperature values and to toggle between menu options within the selected parameter.
	The down arrow is used to decrease temperature values and to toggle between menu options within the selected parameter.

Operating Instructions

Initial Start up

1. Place the calibrator on a flat surface with at least 8" of free space around the instrument.
2. Connect the included power cord and plug into a power outlet.
3. Turn the calibrator on by toggling the power switch to ON.
4. The fan should begin blowing air through the instrument.
5. After a brief 3 second self-test, the calibrator will begin normal operation by displaying both the current target surface temperature and the last registered set temperature.

Note: When the calibrator is first powered ON, the default set temperature is set to 50°C. Refer to *Setting the Temperature Set-Point* for details.

6. The calibrator will now heat up to reach the registered set temperature.

Note: The top display (Orange LED) will continue to update the current temperature until the set temperature is reached.

continued...

Turning Off the Calibrator

It is recommended to select a set-point less than 140°F (60°C) and allow the unit to cool down before turning it off.

Warning: Do not turn the instrument off at a temperature higher than 212°F (100°C). Lower the temperature below 212°F (100°C) before powering off.

Selecting Temperature Unit of Measure

1. Press the °C button to select Celsius (°C).
2. Press the °F button to select Fahrenheit (°F).

Note: The selected temperature unit of measure will be displayed on the screen.

Setting the Temperature Set-Point

1. Use the ▲ and ▼ arrows to increase or decrease the temperature set-point value.
2. Press the ◀◀ button to toggle between digits.
3. Use the ▲ and ▼ buttons to adjust the selected digit.

Note: The values will adjust by 0.1° at every click. Pressing the ◀◀ button allows the user to quickly adjust larger temperature values by selecting the desired digit position.

4. Press the **SET** button to confirm the new temperature set-point.

Setting Overload Alarms 1 & 3

The calibrator allows a user to set overload alarms to trigger when the block temperature exceeds the temperature set-point. When set and triggered, AL 1H will turn off the heating power. When set and triggered, AL 3H will turn on the cooling fan.

Note: The default high overload alarms are set to 5°C (8°F). These alarms can be set by following the steps below:

1. Press the ◀◀ button two times until the top screen displays AL 1H.

continued...

- Use the ▲ and ▼ to change the temperature value which will flash until confirmed.
- Press the ◀◀ button to toggle between digits.
- Use the ▲ and ▼ buttons to adjust the selected digit.
- Press the **SET** button to confirm the new high overload alarm 1.
- Press the ◀◀ button once to switch to high overload alarm 3 as indicated by AL 3H.
- Use the ▲ and ▼ buttons to change the temperature value which will flash until confirmed.
- Press the ◀◀ button to toggle between digits.
- Use the ▲ and ▼ buttons to adjust the selected digit.
- Press the **SET** button to confirm the new high overload alarm 3.
- Press the **SET** button again to exit set up mode and resume normal operation.

Enabling/Disabling the Heating Power

- Press the ◀◀ button once to display the heating power function as indicated by r - 5.
- Use the ▲ and ▼ arrows to select between r ùn (enable heating power) or St Op (disable heating power) which will flash until confirmed.

Note: The default heating power is set to r ùn.

- Press the **SET** button to confirm selection.
- Press the **SET** button again to exit set up mode and resume normal operation.

Keypad Lock

The calibrator allows a user to lock the keypad to avoid unwanted changes to the settings. Follow the steps below to lock the keypad.

- Press the ◀◀ button three times until the screen displays LOC & OFF.

continued...

2. Use the ▲ and ▼ arrows to select between LoC1, LoC2 & oFF which will flash until confirmed.

Note: LoC1 will lock all of the keypad buttons, while LoC2 will only lock the ◀ button allowing a user to continue to modify/confirm the set temperature if required.

3. Press the **SET** button to confirm selection.
4. Press the **SET** button again to exit set up mode and resume normal operation.

Keypad Unlock

Follow the steps below to unlock the keypad:

1. To unlock the keypad, press and hold both the **SET** and ▼ buttons simultaneously. Release when the display indicates KEYP and 0000.

Note: If the display indicates KEYP and 0, press the ▼ button until 0000 is displayed.

2. Press the **SET** button to confirm the selection and resume normal operation.

Replacing the Fuses

The calibrator must be switched off before attempting to replace fuses. To replace fuses:

1. Open the faulty fuse compartment by rotating it counter clockwise.
2. Gently slide out the fuse.
3. Replace with the appropriate fuse (see Specifications below) and tighten the compartment back into place.

Fuse Specifications	
Fuse 1	3A/250V
Fuse 2	200mA/250V

This instrument is equipped with operator accessible fuses. If a fuse blows, it may be due to a power surge or failure of an internal component. Replace the fuse once. If the fuse blows again, it is likely caused by failure of an internal component and you should contact an Authorized REED Service Center.

Product Care

To keep the instrument in good working order we recommend the following:

- Store your product in a clean, dry place.
- Avoid operating the instrument in dirty or dusty environments.
- If the outside of the instrument becomes dirty, it may be wiped clean with a damp cloth and biodegradable cleaner.
- Do not use harsh chemicals on the surface, as it may damage the paint.
- The calibrator should be handled with care. Avoid knocking or dropping the calibrator.

Accessories and Replacement Parts

R8888 Deluxe Hard Carrying Case

Don't see your part listed here? For a complete list of all accessories and replacement parts visit your product page on www.reedinstruments.com.

Applications

Calibrate non-contact temperature instruments; Infrared Thermometers and Thermal Imagers.

Product Warranty

REED Instruments guarantees this instrument to be free of defects in material or workmanship for a period of one (1) year from date of shipment. During the warranty period, REED Instruments will repair or replace, at no charge, products or parts of a product that proves to be defective because of improper material or workmanship, under normal use and maintenance. REED Instruments total liability is limited to repair or replacement of the product. REED Instruments shall not be liable for damages to goods, property, or persons due to improper use or through attempts to utilize the instrument under conditions which exceed the designed capabilities. In order to begin the warranty service process, please contact us by phone at 1-877-849-2127 or by email at info@reedinstruments.com to discuss the claim and determine the appropriate steps to process the warranty.

Product Disposal and Recycling



Please follow local laws and regulations when disposing or recycling your instrument. Your product contains electronic components and must be disposed of separately from standard waste products.

Product Support

If you have any questions on your product, please contact your authorized REED distributor or REED Instruments Customer Service by phone at 1-877-849-2127 or by email at info@reedinstruments.com.

Please visit www.REEDInstruments.com for the most up-to-date manuals, datasheets, product guides and software.

*Product specifications subject to change without notice.
All rights reserved. Any unauthorized copying or reproduction of this manual is strictly prohibited without prior written permission from REED Instruments.*

REED INSTRUMENTS

TEST & MEASURE WITH CONFIDENCE



Access Our
Product Guide



Find Quality Products Online at:

[Valuetesters.com](http://www.valuetesters.com)

info@valuetesters.com